



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	PP		Back / Return
	I-II		Audio / Lang I/II
	P<P		Fav / Marker / PC
	-/--		Guide / EPG / -/--
	3		3
	4		4
	2		2
	8		8
	1		1
	7		7
	6		6
	Vol+		Vol+
	5		5
	Vol-		Vol-
	0		0

Originalfernbedienung Ersatzfernbedienung

	9		9
	Up		Up
	PR+		CH+ / Page+
	Right		Right
	M		OK
	M		Menu / Home
	Left		Left
	Down		Down
	PR-		CH- / Page-
	Blue/Install		Blue / Prime Video / Random
	Yellow/Feature		Yellow / YouTube / Repeat
	Green/Picture		Green / APP / Repeat
	Green/Picture		Picture / Format
	[≡]		Text / Goto
	Red/Sound		Red / Netflix / Search
	Red/Sound		Sound / Title
	[.:≡]		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

Power DIMMER MUTE SHIFT

TV DVD SAT AUX

SLOW STEP - FREEZE HOLD REC MODE

Play Pause Stop First Previous Next Last

TUNE- TUNE+ PRESET- PRESET+

Left Right

TITLE LANG I/II EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV/ RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

HOME ANGLE

MENU INFO

OK

UP DOWN LEFT RIGHT

CLEAR RETURN

EXIT BACK

CANCEL LIST

+ VOL -

SMART MEDIA DISPLAY

+ CH PAGE -

TV DVD CD - STB

1 2 3

VIDEO TAPE TUNER

4 5 6

AUX - HDD USB BLUETOOTH

7 8 9

PC

GUIDE EPG 0 FAV MARKER

HDMI - SAT

NETFLIX APP YouTube Prime Video

SEARCH REPEAT REPEAT A-B RANDOM

Mandis shop

www.mandis.tv