


 

 
 
 
 
 
 
 

 



 
 
 
 
 
 
 
 

 
 









Originalfernbedienung Ersatzfernbedienung

|   |        |   |        |
|---|--------|---|--------|
|    | Power  |    | Power  |
|    | Tv     |    | TV/R   |
|    | P.Mode |    | Format |
|    | S.Mode |    | Dual   |
|    | Sleep  |    | Sleep  |
|    | Aspect |    | 3D     |
|    | 1      |    | 1      |
|    | 2      |    | 2      |
|    | 3      |    | 3      |
|    | 4      |    | 4      |
|    | 5      |    | 5      |
|  | 6      |  | 6      |
|  | 7      |  | 7      |
|  | 8      |  | 8      |
|  | 9      |  | 9      |
|  | 0      |  | 0      |
|  | -/--   |  | Guide  |

Originalfernbedienung Ersatzfernbedienung

|   |              |   |        |
|---|--------------|---|--------|
|    | Recall       |    | Pre Ch |
|    | Vol+         |    | Vol +  |
|    | Vol-         |    | Vol -  |
|    | Mute         |    | Mute   |
|    | Source       |    | AV     |
|    | Ch+          |    | Ch +   |
|    | Ch-          |    | Ch -   |
|    | MTS          |    | Media  |
|    | C.C          |    | Text   |
|    | Info/Display |    | Info   |
|    | Menu         |    | Menu   |
|  | Return       |  | Back   |
|  | Ch.List      |  | List   |
|  | Exit         |  | Exit   |
|  | Up           |  | Up     |
|  | Down         |  | Down   |
|  | Right        |  | Right  |



**Originalfernbedienung Ersatzfernbedienung**

|  |           |  |                |
|--|-----------|--|----------------|
|  | Left      |  | Left           |
|  | Enter     |  | Ok             |
|  | Red       |  | Red            |
|  | Green     |  | Green          |
|  | Yellow    |  | Yellow         |
|  | Blue      |  | Blue           |
|  | V-Chip    |  | Options        |
|  | Fav.Ch    |  | Shift + Pre Ch |
|  | Fav.+     |  | >>             |
|  | Fav.-     |  | <<             |
|  | Add/Erase |  | Shift + Exit   |
|  | Auto      |  | D. Menu        |
|  | HDMI      |  | Smart          |
|  | VGA       |  | Subt           |
|  | COMP      |  | Eject          |

**Originalfernbedienung Ersatzfernbedienung**

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

