



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV/ATV		Info / Angle
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	MTS		Setup / OPT /
	CH+		CH+ / Page+
	Vol-		Vol-
	RecList		Smart / List
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down











Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Guide		Guide / EPG / -/--
	Play		Play / Slow
	Pause/TimeShift		Shift + Pause / Step /
	>>Aspect		>> / Tune+
	I<</Cancel		Shift + Exit / Cancel / Clear
	I<</Cancel		I<< / Preset-
	>>I/Sub.PG		>>I / Preset+
	Stop/Index		Stop / Hold
	Tv/Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	Reveal		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	Size		Zoom / Size
	Hold		Shift + Stop /
	Text		Text / Goto

