



 





 

 


 


 

 

 











 

 













 









 

 








Originalfernbedienung Ersatzfernbedienung

	Power Operate		Power
	Eject		Shift + Eject / Surround
	Open/Close		Eject / Surround
	DVD/VCR		Smart / List
	1		1
	2		2
	3		3
	Timer Rec		Red / Netflix / Search
	4		4
	5		5
	6		6
	Input Select		AV / Input / RDS
	7		7
	8		8
	9		9
	Display		Display / Media
	0		0

Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Cancel		Exit / Cancel / Clear
	Title Menu/Top		Menu / Home
	Up		Up
	CH+		CH+ / Page+
	Left		Left
	TRK-		Vol-
	OK		OK
	Right		Right
	TRK+		Vol+
	DVD Menu		D.Menu / Top
	Down		Down
	CH-		CH- / Page-
	Setup		Setup / OPT /
	Stop		Stop / Hold
	Play		Play / Slow
	Pause/Still		Pause / Step / Freeze



