









 




**Originalfernbedienung Ersatzfernbedienung**

	TV Power		Power
	NET		Display / Media
	[i+]		Info / Angle
	P.Info		Shift + Info / Angle
	ATV		Shift + Setup / OPT / Tools
	DTV		Setup / OPT /
	SAT		Shift + 0
	Radio		TV/Radio /
	Power Source		Shift + Power
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Control		Smart / List
	Rec		Rec / Rec Mode
	Rec Stop		Shift + Stop /
	Stop		Stop / Hold
	Ready		Eject / Surround





















 





 





 

**Originalfernbedienung Ersatzfernbedienung**

	←		I<< / Preset-
	Pause		Pause / Step / Freeze
	→		>>I / Preset+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Fav / Marker / PC
	0		0
	Source		AV / Input / RDS
	I/II/I+II		Audio / Lang I/II
	[<I>]		Zoom / Size

 


 


















**Originalfernbedienung    Ersatzfernbedienung**

	AV Mode		D.Menu / Top
	Eco		Picture / Format
	Mute		Mute / Dimmer
	Vol+		Vol+
	PR+		CH+ / Page+
	Text		Text / Goto
	Vol-		Vol-
	PR-		CH- / Page-
	Menu		Menu / Home
	EPG		Guide / EPG / -/--
	--		Shift + OK
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	End		Exit / Cancel / Clear
	Down		Down

**Originalfernbedienung    Ersatzfernbedienung**

	Back		Back / Return
	[...]		Subtitle / EQ
	[≡?]		Sound / Title
	[≡o]		Sleep / Timer
	[≡+]		Shift + Pause / Step /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

