


 




 

 





 






 






Originalfernbedienung Ersatzfernbedienung

|   |        |   |                   |
|---|--------|---|-------------------|
|    | Power  |    | Power             |
|    | Source |    | AV / Input / RDS  |
|    | 1      |    | 1                 |
|    | 2      |    | 2                 |
|    | 3      |    | 3                 |
|    | 4      |    | 4                 |
|    | 5      |    | 5                 |
|    | 6      |    | 6                 |
|    | 7      |    | 7                 |
|    | 8      |    | 8                 |
|    | 9      |    | 9                 |
|    | TV     |    | TV/Radio /        |
|  | 0      |  | 0                 |
|  | Recall |  | Fav / Marker / PC |
|  | Vol+   |  | Vol+              |
|  | Mute   |  | Mute / Dimmer     |
|  | PR+    |  | CH+ / Page+       |

Originalfernbedienung Ersatzfernbedienung

|   |             |   |                       |
|---|-------------|---|-----------------------|
|    | Vol-        |    | Vol-                  |
|    | i/Info      |    | Info / Angle          |
|    | PR-         |    | CH- / Page-           |
|    | Menu        |    | Menu / Home           |
|    | Up          |    | Up                    |
|    | Q.Menu      |    | D.Menu / Top          |
|    | Left        |    | Left                  |
|    | OK          |    | OK                    |
|    | Right       |    | Right                 |
|    | Back        |    | Back / Return         |
|    | Down        |    | Down                  |
|    | Exit        |    | Exit / Cancel / Clear |
|  | World       |  | Smart / List          |
|  | Music Photo |  | Display / Media       |
|  | Guide       |  | Guide / EPG / -/-     |
|  | */o         |  | Setup / OPT /         |
|  | */o..       |  | Zoom / Size           |



