

 


 





 





























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[≡]		Text / Goto
	[≡?]		D.Menu / Top
	[...]		Subtitle / EQ
	[≡+]		Eject / Surround
	[≡o]		Sound / Title
	[≡◆]		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	0		0
	Source		AV / Input / RDS
	ATV		Shift + Smart / List
	DTV		Shift + Display / Media
	EPG		Guide / EPG / -/-
	Radio		TV/Radio /
	I/II/I+II/▼/O)		Audio / Lang I/II
	Vol+		Vol+
	P+		CH+ / Page+
	P.Info		Display / Media
	Mute		Mute / Dimmer
	Vol-		Vol-
	P-		CH- / Page-
	[i+]		Info / Angle
	[<>]		Picture / Format
	Sleep		Sleep / Timer
	AV Mode		Shift + AV / Input / RDS



