
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	M		Menu
	OK		Ok
	i		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Recall		Pre Ch
	-/--		Guide
	[<>]		Format
	Mute		Mute
	I-II		Dual
	TV		TV/R
	Exit		Exit
	Prog+		Ch +
	Prog-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text



