



 
 

 
 


 

 
 



 
 





 









 


 








 

 
 

 


 

 








 
 




| Originalfernbedienung   | Ersatzfernbedienung | Originalfernbedienung   | Ersatzfernbedienung |
|---|---------------------|---|---------------------|
|      | Power               |      | Power               |
|      | 1                   |      | 1                   |
|      | 2                   |      | 2                   |
|      | 3                   |      | 3                   |
|      | 4                   |      | 4                   |
|      | 5                   |      | 5                   |
|      | 6                   |      | 6                   |
|      | 7                   |      | 7                   |
|      | 8                   |      | 8                   |
|      | 9                   |      | 9                   |
|     | 0                   |     | 0                   |
|    | Recall              |    | Pre Ch              |
|    | Source              |    | AV                  |
|    | ATV                 |    | Shift + Smart       |
|    | DTV                 |    | Smart               |
|    | EPG                 |    | Guide               |
|    | Radio               |    | TV/R                |
|    | ▼/O)/I/II/I+II      |    | Dual                |
|    | Vol+                |    | Vol +               |
|    | Vol-                |    | Vol -               |
|    | Mute                |    | Mute                |
|    | P+                  |    | Ch +                |
|    | P-                  |    | Ch -                |
|    | P.Info              |    | Info                |
|    | [i+]                |    | List                |
|    | AV Mode             |    | Format              |
|    | [<>]                |    | Eject               |
|   | Eco                 |   | 3D                  |
|  | Menu                |  | Menu                |
|  | Up                  |  | Up                  |
|  | Down                |  | Down                |
|  | Right               |  | Right               |
|  | Left                |  | Left                |
|  | OK                  |  | Ok                  |


 


 







Originalfernbedienung Ersatzfernbedienung

|   |                  |   |                 |
|---|------------------|---|-----------------|
|    | End              |    | Exit            |
|    | Back             |    | Back            |
|    | Red              |    | Red             |
|    | Green            |    | Green           |
|    | Yellow           |    | Yellow          |
|    | Blue             |    | Blue            |
|    | [≡]              |    | Text            |
|    | [≡?]             |    | Shift + Subt    |
|    | [...]            |    | Subt            |
|    | [≡+]             |    | Shift + Options |
|   | [≡0]             |   | Shift + Dual    |
|  | [≡◆]             |  | Shift + TV/R    |
|  | Sleep            |  | Sleep           |
|  | Power Aquos Link |  | Shift + Power   |
|  | <<               |  | <<              |
|  | Play             |  | Play            |
|  | >>               |  | >>              |

Originalfernbedienung Ersatzfernbedienung

|   |          |   |              |
|---|----------|---|--------------|
|  | Option   |  | Options      |
|  | Rec      |  | Rec          |
|  | Rec Stop |  | Shift + Stop |
|  | Stop     |  | Stop         |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |
|   |          |   |              |

