







 




 
 










 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	DTV		Smart
	Radio		TV/R
	USB		Options
	DVD		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	Vol +		Vol +
	Vol -		Vol -
	P.Mode		Format
	S.Mode		Shift + Dual
	FAV		Pre Ch
	CH +		Ch +
	CH -		Ch -
	Menu		Menu
	Exit		Exit
	Info		Info
	Source		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

 
 
 



 





Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Aspect		3D
	Subtitle		Subt
	Text		Text
	Audio		Dual
	Text Hold		Shift + Text
	Zoom / Text		Eject
	Power / Display		Shift + Power
	Rec / DVD Menu		Rec
	I<<		I<<
	>>I		>>I
	Stop / Eject		Stop
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Rec List / DVD Setup		List

Originalfernbedienung Ersatzfernbedienung

	Red / Goto		Red
	Green / A-B		Green
	Yellow / Angle		Yellow
	Blue / Repeat		Blue

