

 


 

 

 


 

 

 



 







 

 










 

 



 











 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Video	 + 	Shift + 4
	Video		<< / Tune-
	Scart		Setup / OPT /
	Scart		>> / Tune+
	PC		Fav / Marker / PC
	PC		I<< / Preset-
	TV		TV/Radio /
	TV		>>I / Preset+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	EPG		Guide / EPG / -/-
	0		0
	PRE PR		Back / Return
	Source		AV / Input / RDS
	Aspect	 + 	Shift + Picture / Format
	Dual		Audio / Lang I/II
	Sleep		Sleep / Timer
	Picture		Picture / Format
	PR List		Smart / List
	Sound		Sound / Title
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	P-		CH- / Page-



