 

 

 



 

 







 



 











 






 

 
 
 
 
 
 

 
 
 
 

 

 







Originalfernbedienung Ersatzfernbedienung



 


 




 

 
 



	Power		Power
	Input		AV / Input / RDS
	TV/DVD		TV/Radio /
	DTV/ATV		Smart / List
	EPG		Guide / EPG / -/-
	[<>]		Picture / Format
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Vol+		Vol+
	4		4
	5		5
	6		6
	Vol-		Vol-
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	P+		CH+ / Page+
	[i+]		Info / Angle
	0		0
	Recall		Fav / Marker / PC
	P-		CH- / Page-
	Red/Left Skip		Red / Netflix / Search
	Green/Left Rev		Green / APP / Repeat
	Yellow/Right FWD		Yellow / YouTube / Repeat
	Blue/Right Skip		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Setup/Tv Menu		Setup / OPT /
	DVD Menu		Menu / Home
	Up		Up
	Left/Left Slow		Left




Originalfernbedienung
Ersatzfernbedienung

	OK		OK
	Right/ > Slow		Right
	Return		Back / Return
	Down		Down
	Top Menu		D.Menu / Top
	Cancel		Exit / Cancel / Clear
	[...]		Subtitle / EQ
	[≡♦]/Audio		Audio / Lang I/II
	Play Mode		Display / Media
	[≡≡]/Text		Text / Goto
	[≡?]/Angle		Shift + Info / Angle
	[≡o]/Zoom		Zoom / Size
	[≡+]		Sleep / Timer

Originalfernbedienung
Ersatzfernbedienung

