 

 

 



 

 







 



 











 






 

 
 
 
 
 
 

 
 
 
 

 

 







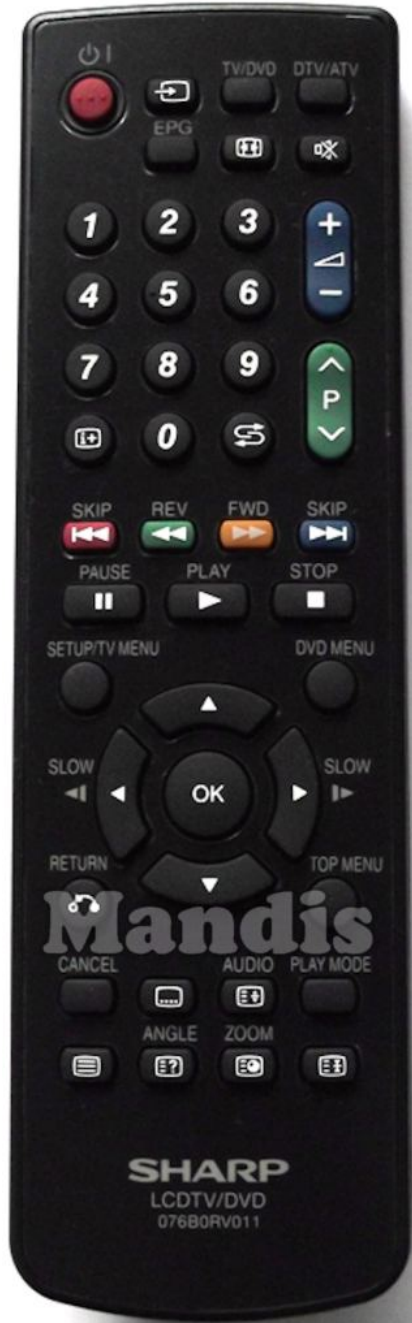 
Originalfernbedienung Ersatzfernbedienung

|   |         |   |                   |
|---|---------|---|-------------------|
|    | Power   |    | Power             |
|    | Input   |    | AV / Input / RDS  |
|    | TV/DVD  |    | TV/Radio /        |
|    | DTV/ATV |    | Smart / List      |
|    | EPG     |    | Guide / EPG / -/- |
|    | [<>]    |    | Picture / Format  |
|    | Mute    |    | Mute / Dimmer     |
|    | 1       |    | 1                 |
|    | 2       |    | 2                 |
|   | 3       |   | 3                 |
|  | Vol+    |  | Vol+              |
|  | 4       |  | 4                 |
|  | 5       |  | 5                 |
|  | 6       |  | 6                 |
|  | Vol-    |  | Vol-              |
|  | 7       |  | 7                 |
|  | 8       |  | 8                 |





 


 
 



 

 

 



 

Originalfernbedienung Ersatzfernbedienung

|   |                  |   |                             |
|---|------------------|---|-----------------------------|
|    | 9                |    | 9                           |
|    | P+               |    | CH+ / Page+                 |
|    | [i+]             |    | Info / Angle                |
|    | 0                |    | 0                           |
|    | Recall           |    | Fav / Marker / PC           |
|    | P-               |    | CH- / Page-                 |
|    | Red/Left Skip    |    | Red / Netflix / Search      |
|    | Green/Left Rev   |    | Green / APP / Repeat        |
|    | Yellow/Right FWD |    | Yellow / YouTube / Repeat   |
|   | Blue/Right Skip  |   | Blue / Prime Video / Random |
|  | Pause            |  | Pause / Step / Freeze       |
|  | Play             |  | Play / Slow                 |
|  | Stop             |  | Stop / Hold                 |
|  | Setup/Tv Menu    |  | Setup / OPT /               |
|  | DVD Menu         |  | Menu / Home                 |
|  | Up               |  | Up                          |
|  | Left/Left Slow   |  | Left                        |





Originalfernbedienung Ersatzfernbedienung

|   |               |   |                       |
|---|---------------|---|-----------------------|
|    | OK            |    | OK                    |
|    | Right/ > Slow |    | Right                 |
|    | Return        |    | Back / Return         |
|    | Down          |    | Down                  |
|    | Top Menu      |    | D.Menu / Top          |
|    | Cancel        |    | Exit / Cancel / Clear |
|    | [...]         |    | Subtitle / EQ         |
|    | [≡◆]/Audio    |    | Audio / Lang I/II     |
|    | Play Mode     |    | Display / Media       |
|    | [≡]/Text      |    | Text / Goto           |
|   | [≡?]/Angle    |   | Shift + Info / Angle  |
|  | [≡o]/Zoom     |  | Zoom / Size           |
|  | [≡+]          |  | Sleep / Timer         |
|   |               |   |                       |
|   |               |   |                       |
|   |               |   |                       |
|   |               |   |                       |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

