


 

 





Originalfernbedienung Ersatzfernbedienung

	On/Off		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Picture		Format

Originalfernbedienung Ersatzfernbedienung

	Sound		Dual
	Source		AV
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	FAV		Shift + Pre Ch
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Info		Info
	Text		Text
	Subtitle		Subt
	TV		TV/R





Originalfernbedienung Ersatzfernbedienung

 YouTube	 Media
 Netflix	 Smart
 Net+	 Shift + Media
 Rec/DVD Menu	 Rec
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<
 >>	 >>
 Play	 Play
 Pause	 Pause
 Rec List/DVD	 List
 Red/Goto	 Red
 Green/A-B	 Green
 Yellow/Angle	 Yellow
 Blue/Repeat	 Blue

Originalfernbedienung Ersatzfernbedienung

