





 





 

 
 
 
 
 


 




 
 









 

 
 
 
 
 

 
 
 
 
 

 
 
 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|------------|
|  | Power |  | Power |
|  | AV Mode |  +  | Shift + AV |
|  | Radio |  | TV/R |
|  | TruSurround |  | List |
|  | OPC |  | Media |
|  | DTV |  | Smart |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Recall |  | Pre Ch |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------|
|  | Source |  | AV |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | [<>] |  | Format |
|  | v/O)/I/II/I+II |  | Dual |
|  | [i+] |  | Info |
|  | Sleep |  | Sleep |
|  | EPG |  | Guide |
|  | ESG |  | Options |
|  | DTV Menu |  | D. Menu |
|  | [≡] |  | Text |
|  | Menu |  | Menu |
|  | End |  | Exit |
|  | Return |  | Back |



