 




Originalfernbedienung Ersatzfernbedienung

	On/Off		Power
	Freeview Play		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute
	Tv Guide		Guide
	Vol+		Vol +
	Vol-		Vol -
	Picture		Format

Originalfernbedienung Ersatzfernbedienung

	Sound		Dual
	Source		AV
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Back		Back
	FAV		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Info		Info
	Text		Text
	Subtitle		Subt
	TV		TV/R



