 

 

 
 
 


 



 


 


 
 
 
 
 
 
 
 
 

 





 


 
 


 


 









Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Back/Repeat		Back
	Memory		Smart
	Clear		Exit
	Clock/Timer		AV

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Bass/Treble		Options
	X-Bass		Dual
	Random		Subt
	<</></Tuning		<<
	>>/>>/Tuning		>>
	Folder		Text
	Demo/Dimmer		Info
	Preset Up		Up
	Preset Down		Down
	Enter		Ok
	Vol+		Vol +
	Vol+		Right
	Vol-		Vol -
	Vol-		Left
	Mute		Mute
	CD		Yellow



