 



 
 

 
 

 
 

 


 

 



 
 

 












Originalfernbedienung Ersatzfernbedienung

	On / Stand By		Power
	Clock / Timer		AV
	RDS ASPM		Shift + 1
	Direct		Media
	RDS PTY		Shift + 2
	On Screen		Shift + Options
	RDS Disp		Shift + 3
	Clear / Display		Exit
	Clear / Display		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	+10		Guide
	Memory /		Mute
	Zoom		Eject
	Subtitle		Subt
	Menu		Menu
	Return		Back
	Up / Tuning+		Up
	Down / Tuning-		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<< / << / Preset-		<<
	I<< / << / Preset-		I<<
	>>I / >> /		>>I
	>>I / >> /		>>



Preset+

