


 


 
 
 
 


 


 


 
 
 
 
 
 





 

 


 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Input		AV
	Tv		TV/R
	PC		Smart
	AV Mode		3D

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Vol+		Vol +
	Vol-		Vol -
	Freeze		Shift + Media
	View Mode		Media
	CH+		Ch +
	CH-		Ch -
	Surround		Dual
	MPX		Format
	Display		Info
	Menu		Menu
	Exit		Exit
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text
	[...]		Subt
	USB		Options
	Stop		Stop
	[≡◇]		List
	[≡+]		Guide
	<<		<<
	>>		>>
	[≡?]		D. Menu
	[≡o]		Eject
	Pause		Pause
	Play		Play

Originalfernbedienung Ersatzfernbedienung

