




**Originalfernbedienung Ersatzfernbedienung**

	Standby		Shift + Power
	On		Power
	Computer		1
	S-Video		2
	Video		3
	Break Timer		Sleep
	Freeze		Stop
	AV Mute		Mute
	Magnify+		Smart
	Magnify-		Media
	Page Up		Ch +
	Page Down		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Pointer		D. Menu
	Spot		Info
	Up		Up

**Originalfernbedienung Ersatzfernbedienung**

	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Effect / Left Click		Exit
	Return / Right Click		Back
	Keystone		Subt
	Picture Mode		Format
	Menu/Help		Menu
	Auto/Sync		Options
	Eco+Quiet		3D
	Resize		Eject

