







 







 

 





 













**Originalfernbedienung Ersatzfernbedienung**

	On/Standby		Power
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Back/Random		Back / Return
	I<</<</Preset-		I<< / Preset-
	Preset+ />>/>>		>>I / Preset+
	Memory/Set		Setup / OPT /
	Tuning-		<< / Tune-
	Tuning+		>> / Tune+
	Clear		Exit / Cancel / Clear
	Timer/Set		D.Menu / Top
	Timer		Shift + Sleep / Timer
	Sleep		Sleep / Timer
	Timer-		Down
	Timer+		Up
	Function		Menu / Home

**Originalfernbedienung Ersatzfernbedienung**

	Band		TV/Radio /
	X-Bass/Equalizer		Sound / Title
	3D Surround		Audio / Lang I/II
	Vol-		Vol-
	Vol+		Vol+

