
 

 





 
 





 

 

 




 

 




 

 

 

 
 
 

 

 


 
 

 

 
 


 





Originalfernbedienung Ersatzfernbedienung

	Red / -1		Red
	Green / G / +1		Green
	Yellow / Stop		Yellow
	Blue / [=/?]		Blue
	[=] / [TV]		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / AV		0
	Prog+		Ch +
	Prog-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Contrast-		Left
	Contrast+		Right
	*-		Down
	*+		Up
	P / C		Back
	OK		Ok
	i		Info
	Mute		Mute
	Tint-		<<
	Tint+		>>
	Power		Power

