 


 
 




 
 



 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Mute		Mute
	> <		Smart
	[≡]		Text
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch
	[i+]		Info
	[1 2]		Options
	[-O-]/Active Control		Media
	[<>]		Format
	Source		AV
	(O)		TV/R
	Red		Red
	Green/Timer		Green
	Yellow/[]		Yellow





Originalfernbedienung Ersatzfernbedienung


















 

 
 
 
 

 
 
 
 













 

 

 

 

 

 



 
 


 



 



 
	Blue/[...]		Blue
	Rec		Rec
	<<		<<
	Stop		Stop
	Play		Play
	>>		>>
	[[I]]		Guide
	Power AMP		Shift + Power
	[≡] AMP		Shift + Text
	[[I]] AMP		Shift + Guide
	OK AMP		Shift + Ok
	Up AMP		Shift + Up
	Down AMP		Shift + Down
	Right AMP		Shift + Right
	Left AMP		Shift + Left
	Menu AMP		Shift + Menu
	P+ AMP		Shift + Ch +

Originalfernbedienung Ersatzfernbedienung

	P- AMP		Shift + Ch -
	Mute AMP		Shift + Mute
	Vol+ AMP		Shift + Vol +
	Vol- AMP		Shift + Vol -
	1 AMP		Shift + 1
	2 AMP		Shift + 2
	3 AMP		Shift + 3
	4 AMP		Shift + 4
	5 AMP		Shift + 5
	6 AMP		Shift + 6
	7 AMP		Shift + 7
	8 AMP		Shift + 8
	9 AMP		Shift + 9
	0 AMP		Shift + 0
	P<P AMP		Shift + Pre Ch
	>> AMP		Shift + >>
	<< AMP		Shift + <<







Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Source		AV
	>>		>>
	<<		<<
	Stop		Stop
	Play		Play
	[[I]]		Guide
	[≡]		Text
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	> <		Smart
	Menu		Menu
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	P<P		Pre Ch
	[1]2		Options
	[-O]/Active Control		Media








 
 
 
 
 
 


 
 
 

 
 
 

 
 
 









Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	[<>]		Format				





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	(O		TV/R
	Red		Red
	Green/Timer		Green
	Yellow/[]		Yellow
	Blue/[...]		Blue
	>>		>>
	Rec		Rec
	<<		<<
	Stop		Stop
	Play		Play
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	> <		Smart
	Menu		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

	[i+]		Info
	P<P		Pre Ch
	[1 2]		Options
	[-O-]/Active Control		Media
	[<>]		Format
	Power VCR		Shift + Power
	Source VCR		Shift + AV
	Rec VCR		3D
>> VCR button" data-bbox="228 517 261 557"/>	>> VCR		Shift + >>
<< VCR button" data-bbox="228 564 261 604"/>	<< VCR		Shift + <<
	Stop VCR		Shift + Stop
	Play VCR		Shift + Play
	OK VCR		Shift + Ok
	Up VCR		Shift + Up
	Down VCR		Shift + Down
	Right VCR		Shift + Right
	Left VCR		Shift + Left

Originalfernbedienung Ersatzfernbedienung

	> < VCR		Shift + Smart
	Menu VCR		Shift + Menu
	P+ VCR		Shift + Ch +
	P- VCR		Shift + Ch -
	1 VCR		Shift + 1
	2 VCR		Shift + 2
	3 VCR		Shift + 3
	4 VCR		Shift + 4
	5 VCR		Shift + 5
	6 VCR		Shift + 6
	7 VCR		Shift + 7
	8 VCR		Shift + 8
	9 VCR		Shift + 9
	0 VCR		Shift + 0
	[i+] VCR		Shift + Info
	P<P VCR		Shift + Pre Ch



 


 


 
 

 



 

 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	>>		>>
	<<		<<
	Stop		Stop
	Play		Play
	[[I]]		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	> <		Smart
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	P<P		Pre Ch

