

 

 


 
 







 


 
 
 




 

 


 
 




Originalfernbedienung Ersatzfernbedienung


 






 


 

 


	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Dual
	TXT		Text
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source		AV

Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	Home		Smart
	G		Guide
	i		Info
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Netflix		Media
	YouTube		Shift + Media
	*1		Format
	Prime Video		Shift + Smart
	Red		Red





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

