

 
 

 

 

 
 
 
 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Auto		Options
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Nicam/A2		Dual
	System		Smart
	CH+		Ch +
	CH-		Ch -
	Display		Info
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Exit		Exit
	Menu		Menu
	Input		AV
	PMode		Format
	SMode		Shift + Dual
	Sleep		Sleep
	Text		Text





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Hold		Stop				
	PgDn		I<<				
	PgUp		>>I				
	Index		List				
	Size		Eject				
	Reveal		Media				
	Subpage		Subt				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Cyan		Blue				

