



Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	List		Smart / List
	Mode		D.Menu / Top
	i		Info / Angle
	TV/R Live		TV/Radio /



Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Recall		Back / Return
	Menu		Menu / Home
	CH+		CH+ / Page+
	Text		Text / Goto
	Option		Setup / OPT /
	Vol+		Vol+
	CH-		CH- / Page-
	F1		Shift + 1
	F2		Shift + 2
	Vol-		Vol-
	Rec		Rec / Rec Mode





Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Archive		Display / Media
	<<		<< / Tune-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

