
 









 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	PC Auto/Eject		Smart / List
	FAV		Fav / Marker / PC
	FAV-		Shift + CH- /
	FAV+		Shift + CH+ /
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9














 

 
 

Originalfernbedienung Ersatzfernbedienung

	-/--		Shift + Guide / EPG / -/--
	0		0
	Back		Back / Return
	Display		Display / Media
	Input		AV / Input / RDS
	Aspect		Shift + Picture / Format
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Mute		Mute / Dimmer
	Exit/DVD Setup		Exit / Cancel / Clear
	Vol+		Vol+
	Lang/Audio		Audio / Lang I/II
	CH+		CH+ / Page+





 
 




Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	CH-		CH- / Page-
	Angle/Text		Text / Goto
	Zoom/Hold		Zoom / Size
	D.Menu/Tv/Radi		TV/Radio /
	Title/EPG		Guide / EPG / -/--
	D.Disp/Index		D.Menu / Top
	Play/Size		Play / Slow
	Pause/Size		Pause / Step / Freeze
	<</Reveal		<< / Tune-
	>>		>> / Tune+
	Subtitle/Subpage		Subtitle / EQ
	Goto		Shift + Text /
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Red/Program		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Green/Intro		Green / APP / Repeat
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B		Blue / Prime Video / Random

