
 
 

 




 

 

 

 
 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close /		Eject / Surround
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Shift + Guide / EPG / -/--
	0		0
	RECALL		Back / Return
	VOL +		Vol+
	ASPECT		Shift + Picture / Format



 





 

 

 







 

 
 

 

 

 

Originalfernbedienung Ersatzfernbedienung

	NICAM		Shift + Audio / Lang I/II
	CH +		CH+ / Page+
	VOL -		Vol-
	DISPLAY		Display / Media
	CH -		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	LCD MENU		Shift + Menu /
	Down		Down
	EXIT		Exit / Cancel / Clear
	INPUT		AV / Input / RDS
	P.MODE		Picture / Format
	S.MODE		Sound / Title
	SLEEP		Sleep / Timer
	FAV		Fav / Marker / PC





Originalfernbedienung Ersatzfernbedienung

	FAV -		Shift + CH- /
	FAV +		Shift + CH+ /
	EPG		Guide / EPG / -/--
	TEXT		Text / Goto
	HOLD		Shift + Stop /
	Subtitle		Subtitle / EQ
	TV/RADIO		TV/Radio /
	INDEX / D.DISP		Menu / Home
	SIZE / ZOOM		Zoom / Size
	REVEAL/ANGLE		Info / Angle
	TITLE / Subpage		Shift + Sound / Title
	D.MENU		D.Menu / Top
	Audio		Audio / Lang I/II
	Goto		Shift + Text /
	Setup		Setup / OPT /
	MEDIA		Shift + Display / Media
	PLAY/PAUSE		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	PLAY/PAUSE		Shift + Play /
	<<		<< / Tune-
	>>		>> / Tune+
	REC		Rec / Rec Mode
	STOP		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	RED / Prog		Red / Netflix / Search
	GREEN / Intro		Green / APP / Repeat
	YELLOW /		Yellow / YouTube / Repeat
	YELLOW /		Shift + Yellow / YouTube /
	BLUE / A-B		Blue / Prime Video / Random

