
 

 
 




 







 
 
 


 

 








 






 
 


 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV		Media
	Text		Text
	Info		Info
	PIP		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide




 
 








 
Originalfernbedienung Ersatzfernbedienung

	Source		AV
	Menu		Menu
	DTV Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Exit		Exit
	ARC		3D
	Recall		Back
	Mix		Shift + Text
	Subpage		Subt


 

 
 
 


 




**Originalfernbedienung Ersatzfernbedienung**

	Hold		Options
	Size		Eject
	Reveal		Shift + Options
	Update		Play
	Index		Shift + Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Text Store		Pause
	Blue		Blue
	PIP Prog+		>>
	S.Select		Sleep
	PIP Prog-		<<
	DTV Page-		I<<
	DTV Setup		D. Menu
	Tv/Radio		TV/R
	DTV Page+		>>I

**Originalfernbedienung Ersatzfernbedienung**

	PC		Shift + Media
	Dual I-II		Dual
	Sleep/Timer		Shift + Power
	Still		Shift + Subt
	SSM		Shift + Dual
	Text List		List
	PSM		Format
	DTV Fav		Pre Ch
	PIP Input		Shift + Red
	PIP Position		Shift + Yellow
	PIP Size		Shift + Green
	Swap		Shift + Back

