


 


 



 
 
 
 






 




 



 









 

 





 




 
 
 
 

 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Image Mode		V-FOR
	Sound Mode		Audio
	Display Mode		WIDE
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Alternately		-/-- / EPG
	Screen Display		INFO
	Home		VOD

Originalfernbedienung Ersatzfernbedienung

	Bumper		P/C / FAV
	Input Source		SRC
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	OK		OK
	Back		BACK
	Menu		MENU
	CH+		CH +
	CH-		CH -
	Mute		MUTE
	Vol+		VOL +
	Vol-		VOL -
	Red		Red (A)
	Green		Green (B)
	Yellow		Yellow (C)





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
Blue	Blue (D)

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

