















 

































 

 

Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Tone-		<< / Tune-
Tone+		>> / Tune+
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Surround		Eject / Surround
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK

Originalfernbedienung Ersatzfernbedienung

Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Update		Smart / List
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8	 8		
9	 9		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Nicam/Mono	 +  Shift + Audio / Lang I/II		
Level L	 +  Shift + Left		
Level R/Woofer	 +  Shift + Right		
Audio+	 +  Shift + Vol+		
Audio-	 +  Shift + Vol-		

