




**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Open/Close		Eject / Surround
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Set Up		Setup / OPT /
	Return		Back / Return
	Menu		Menu / Home
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Red		Red / Netflix / Search
	Blue		Blue / Prime Video / Random
	Play		Play / Slow
	Pause/Step		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<		I<< / Preset-

**Originalfernbedienung Ersatzfernbedienung**

	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide / EPG / -/-
	Audio		Audio / Lang I/II
	Title		Sound / Title
	Clear		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

REPEAT	Repeat	<b>SHIFT</b> + <b>APP</b>	Shift + Green / APP /
PROG	Prog	<b>PROGRAM TV/RADIO</b>	TV/Radio /
ZOOM	Zoom	<b>SIZE ZOOM</b>	Zoom / Size
V-REMOTE	V-Remote	<b>FORMAT PICTURE</b>	Picture / Format
INTRO	Intro	<b>OK</b>	OK
EQ	EQ	<b>SHIFT</b> + <b>EQ SUBTITLE</b>	Shift + Subtitle / EQ
KARAOKE	Karaoke	<b>RDS AV INPUT</b>	AV / Input / RDS
MARK	Mark	<b>PC FAV MARKER</b>	Fav / Marker / PC
SEARCH	Search	<b>SHIFT</b> + <b>NETFLIX SEARCH</b>	Shift + Red / Netflix /
DISPLAY	Display	<b>MEDIA DISPLAY</b>	Display / Media
IS/PS	IS/PS	<b>LIST SMART</b>	Smart / List
SUBTITLE	Subtitle	<b>EQ SUBTITLE</b>	Subtitle / EQ
VOL +	Vol+	<b>+ VOL</b>	Vol+
VOL -	Vol-	<b>- VOL</b>	Vol-

Originalfernbedienung Ersatzfernbedienung