
 
 












 










 











Originalfernbedienung Ersatzfernbedienung



















 



 



 

 
 
	Source		AV / Input / RDS
	Power		Power
	Theatre		Sleep / Timer
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Sync Menu		D.Menu / Top
	I-Manual		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	I-Manual		TV/Radio /
	Scene		Picture / Format
	[+]		Zoom / Size
	Digital/Analog		Smart / List
	Exit		Exit / Cancel / Clear
	Internet/Video		Display / Media
	FAV		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide / EPG / -/--
	Up		Up
	[i+]		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Options		Setup / OPT /
	Home		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Text		Text / Goto				
	0		0				
	Subtitle		Subtitle / EQ				
	Vol+		Vol+				
	Pr+		CH+ / Page+				
	Mute		Mute / Dimmer				
	Audio		Audio / Lang I/II				
	Vol-		Vol-				
	Pr-		CH- / Page-				

