 






 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|--|-----------------|
|  | Power |  | Power |
|  | Source |  | AV |
|  | [+] |  | D. Menu |
|  | [> <] |  | Format |
|  | A/B |  | Pre Ch |
|  | EPG [I] |  | Shift + Options |
|  | [i+] |  | Info |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Menu |  | Menu |
|  | Return |  | Shift + Back |



 

 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|---------|
|  | Tools |  | Options |
|  | Mute |  | Mute |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Prog+ |  | Ch + |
|  | Prog- |  | Ch - |
|  | Text |  | Text |
|  | Back |  | Back |
|  | 0 |  | 0 |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|------|
|  | 9 |  | 9 |
|  | Digital |  | TV/R |
|  | Analog |  | List |
|  | OK |  | Ok |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

