







 
 




 








 
 
 
 



 



 






 


 
 



 
 


 
 


 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv	 + 	Shift + Power
	Input Tv		AV
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	♥		Pre Ch
	Theatre		Media
	Top Menu		Menu
	Pop Up Menu		Guide
	Return		Back
	Options		Options
	Eject		Eject
	Home		Smart
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Play		Play
	Pause		Pause
	Stop		Stop
	Display		Info





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	→		Ch +
	←		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

