















 

































 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Stereo/Mono		Shift + Sound / Title
	Tv/Video		TV/Radio /
	Memory		Smart / List
	Muting		Mute / Dimmer
	1		1
	2		2
	3		3
	Function		Setup / OPT /
	4		4
	5		5
	6		6
	Band		Audio / Lang I/II
	7		7
	8		8
	9		9
	Sound/Field		Sound / Title











 

 

 







 











Originalfernbedienung Ersatzfernbedienung

	0/10		0
	+10		Guide / EPG / -/-
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	Tv CH-		CH- / Page-
	Tv CH+		CH+ / Page+
	Enter		OK
	AMP Menu		Menu / Home





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Muting		Mute / Dimmer
	Play Mode		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<</Tuning-/<l		<< / Tune-
	Tuning+/Slow		>> / Tune+
	I<</Preset-		I<< / Preset-
	>>I/Preset+		>>I / Preset+
	Sound Field		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Open/Close		Eject / Surround
	Band		Picture / Format
	Name		Zoom / Size
	Time		Sleep / Timer
	Tv/Video		TV/Radio /

























 









**Originalfernbedienung    Ersatzfernbedienung**

	DVD Menu		D.Menu / Top
	Function		Setup / OPT /
	AMP Menu		Menu / Home
	Up		Up
	Angle		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Memory		Smart / List
	Vol-		Vol-
	Display		Display / Media
	1		1
	2		2





## Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0/10		0
	Repeat		Green / APP / Repeat
	Dimmer		Shift + Mute / Dimmer
	Play/Select		Shift + Play /
	Title		Shift + Sound / Title
	Stereo/Mono		Shift + Audio / Lang I/II
	Enter		Shift + OK
	DVD Display		Shift + 2
	DVD Setup		Shift + 3

## Originalfernbedienung Ersatzfernbedienung