

 

 

 

 

 

 



 

 

 

 

 



 
 

 

 

 

 

 

 



 
 
 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Audio Monitor		Audio / Lang I/II
	Wide		Picture / Format
	Tv/Video		TV/Radio /
	[≡]		Text / Goto
	Tv/Video		AV / Input / RDS
	Vol+		Vol+
	[]		Info / Angle
	Prog+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	Prog-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5







 





 





 
 



 



 



Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random






Originalfernbedienung Ersatzfernbedienung

	Eject		Eject / Surround
	Power		Power
	Audio Monitor		Audio / Lang I/II
	Wide		Picture / Format
	Counter Remain		Yellow / YouTube / Repeat
	[I]		Info / Angle
	I> Slow		Shift + Play /
	X2		Shift + >> /
	I<< Index Search		I<< / Preset-
	Index Search >>I		>>I / Preset+
	Display		Display / Media
	SP/LP		Green / APP / Repeat
	Clear		Exit / Cancel / Clear
	Tv/Video		TV/Radio /
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Input Select		AV / Input / RDS
	Vol+		Vol+
	Prog+		CH+ / Page+
	Vol-		Vol-
	Prog-		CH- / Page-
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Up		Up
	Timer		Sleep / Timer





Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Smart Search		Smart / List
	Smart Search		Red / Netflix / Search
	<<		<< / Tune-
	Left		Left
	Play		Play / Slow
	OK		OK
	>>		>> / Tune+
	Right		Right
	Stop		Stop / Hold
	Down		Down

Originalfernbedienung Ersatzfernbedienung

