







 
 
 
 
 
 

 
 







 

 
 
 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	Input Tv		AV
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Subtitle		Subt
	Vol +		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol -		Vol -
	Display		Info
	Yellow		Yellow
	Blue		Blue
	Red		Red
	Green		Green
	Top Menu		Shift + Menu
	Pop Up Menu		Menu
	Return		Back
	Options		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Home		Smart
	I<<		I<<





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	>>		>>
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Netflix		Media
	SEN		TV/R

Originalfernbedienung Ersatzfernbedienung

