

 

 

 
 

 
 
 
 
 
 
 

 
 
 


 

 
 
 






 







 




 

 
 
 

 

 

 

 
 




Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Display	 Info
 Sleep	 Sleep
 Play Mode/Tuning Mode	 Shift + Play
 Repeat/FM	 Text
 Bass Bazuca	 Subt
 EQ	 Dual
 Tuner Memory	 TV/R
 Timer Menu	 Menu
 Return	 Back
 Options	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<</-	 I<<

Originalfernbedienung	Ersatzfernbedienung
 >> /+	 >>
 <<	 <<
 >>	 >>
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Folder+	 2
 Folder-	 1
 Led Speaker	 Media
 Vol+	 Vol +
 Vol-	 Vol -
 Function+	 Ch +
 Function-	 Ch -

