

 
 
 

 


 

 
 
 
 
 
 

 
 
 




 
 










Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Sleep	 Sleep
 Display	 Info
 Play Mode / Tuning Mode	 Shift + Play
 Repeat / FM Mode	 Text
 Clear	 Exit
 EQ	 Dual
 Tuner Memory	 Eject
 Timer Menu	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Return	 Back
 Tool Menu	 Menu
 >>I	 >>I

Originalfernbedienung	Ersatzfernbedienung
 I<<	 I<<
 Folder +	 Smart
 Folder -	 Media
 Play	 Play
 >>	 >>
 <<	 <<
 Pause	 Pause
 Stop	 Stop
 Volume +	 Vol +
 Volume -	 Vol -
 Function +	 Ch +
 Function -	 Ch -

