




 

 



 







 

 



 



 

 

 

 

 
 
















 

 

 

 

 







Originalfernbedienung Ersatzfernbedienung

|   |                       |   |                       |
|---|-----------------------|---|-----------------------|
|    | Power                 |    | Power                 |
|    | [+]                   |    | Picture / Format      |
|    | [i+]                  |    | Info / Angle          |
|    | <</<l                 |    | << / Tune-            |
|    | Play Bravia Sync      |    | Play / Slow           |
|    | Pause Bravia          |    | Pause / Step / Freeze |
|    | >>/l>                 |    | >> / Tune+            |
|    | Sync Menu Bravia Sync |    | D.Menu / Top          |
|    | Stop Bravia Sync      |    | Stop / Hold           |
|    | Theatre Bravia        |    | TV/Radio /            |
|   | Digital               |   | Display / Media       |
|  | Analog                |  | Smart / List          |
|  | Audio                 |  | Subtitle / EQ         |
|  | Audio                 |  | Audio / Lang I/II     |
|  | Guide                 |  | Guide / EPG / -/--    |
|  | Source                |  | AV / Input / RDS      |
|  | Return                |  | Back / Return         |



 

 

 




 













Originalfernbedienung Ersatzfernbedienung

|   |         |   |                             |
|---|---------|---|-----------------------------|
|    | Options |    | Setup / OPT /               |
|    | Up      |    | Up                          |
|    | Down    |    | Down                        |
|    | Right   |    | Right                       |
|    | Left    |    | Left                        |
|    | OK      |    | OK                          |
|    | Home    |    | Menu / Home                 |
|    | Red     |    | Red / Netflix / Search      |
|    | Green   |    | Green / APP / Repeat        |
|    | Yellow  |    | Yellow / YouTube / Repeat   |
|   | Blue    |   | Blue / Prime Video / Random |
|  | 1       |  | 1                           |
|  | 2       |  | 2                           |
|  | 3       |  | 3                           |
|  | 4       |  | 4                           |
|  | 5       |  | 5                           |
|  | 6       |  | 6                           |





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

|   |       |   |                           |
|---|-------|---|---------------------------|
|    | 7     |    | 7                         |
|    | 8     |    | 8                         |
|    | 9     |    | 9                         |
|    | 0     |    | 0                         |
|    | Text  |    | Text / Goto               |
|    | FAV   |  +  | Shift + Fav / Marker / PC |
|    | Vol+  |    | Vol+                      |
|    | Vol-  |    | Vol-                      |
|    | Mute  |    | Mute / Dimmer             |
|   | Prog+ |   | CH+ / Page+               |
|  | Prog- |    | CH- / Page-               |
|  | Back  |    | Fav / Marker / PC         |
|   |       |   |                           |
|   |       |   |                           |
|   |       |   |                           |
|   |       |   |                           |
|   |       |   |                           |

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

