

 





 




 

 







 

 



 
 

 




 
 





 







 

 







 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	Open/Close		Eject
	Theatre Sync		Smart
	Tv Input		AV
	Tv CH+		Ch +
	Tv CH-		Ch -
	Display		Info
	Function		Options
	Disc Skip		Media
	Sound Field		Red
	Movie/Music		Green
	Dynamic Bass		Yellow
	Video Format		Blue
	Audio		Dual
	Subtitle/D.Tuning		Subt
	Angle		Text

Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	System Menu		Menu
	Muting		Mute
	Picture Navi		List
	Vol+		Vol +
	Vol-		Vol -
	DVD Menu		D. Menu





Originalfernbedienung Ersatzfernbedienung

	Menu TV	 + 	Shift + D. Menu
	-/-- Tv		Guide
	10/0 Tv	 + 	Shift + 0
	Return Tv	 + 	Shift + Back
	1 Tv	 + 	Shift + 1
	2 Tv	 + 	Shift + 2
	3 Tv	 + 	Shift + 3
	4 Tv	 + 	Shift + 4
	5 Tv	 + 	Shift + 5
	6 Tv	 + 	Shift + 6
	7 Tv	 + 	Shift + 7
	8 Tv	 + 	Shift + 8
	9 Tv	 + 	Shift + 9
	OK		Ok
	Return		Back
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Tv Vol+	 + 	Shift + Vol +
	Tv Vol-	 + 	Shift + Vol -
	Up Tv	 + 	Shift + Up
	Down Tv	 + 	Shift + Down
	Right Tv	 + 	Shift + Right
	Left Tv	 + 	Shift + Left
	[]/Display		3D
	Play		Play
	Pause		Pause
	Stop		Stop
	>>/>/Tuning +		>>
	<</</Tuning -		<<
	>>/>/Preset+		>>
	<</</Preset-		<<
	OK Tv	 + 	Shift + Ok





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	→/Advance/Step I>		Format				
	←-/Replay/<I Step		TV/R				
	DVD Top Menu	 + 	Shift + Menu				
	Enter Tv		Pre Ch				

