






 




 



 





Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Sleep	 Sleep
 Display	 Info
 Clock/Timer	 Format
 Clock/Timer Set	 3D
 Tuner Memory	 Back
 Play Mode/Tuning Mode	 Shift + Play
 Repeat FM	 Text
 USB	 Red
 CD	 Green
 Band/Tuner	 Yellow
 Function	 Blue
 I<</-	 I<<
 >>I/+	 >>I
 <</+	 <<
 >>/-	 >>
 Play	 Play

Originalfernbedienung	Ersatzfernbedienung
 Pause	 Pause
 Stop	 Stop
 Clear	 Exit
 EQ	 Dual
 Folder+	 Ch +
 Folder-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Enter	 Ok

