 

 


 

 

 
 

 
 
 
 
 
 
 

 
 
 



 
 
 

 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Social View		Media
	Input		AV
	Digital/Analog		Eject
	Exit		Exit
	Football		List
	3D		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	TV/Radio		TV/R
	[≡]		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	X/Related Search/Track ID		Shift + TV/R
	Sync Menu		Menu
	?/i-Manual		D. Menu
	Discover		Sleep
	[i+]/[?]		Info
	Return/Back		Back
	Options		Options
	Home		Smart
	Guide		Guide
	Up		Up
	Down		Down



 



 





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Recall		Pre Ch
	Prog+		Ch +
	Prog-		Ch -
	Audio		Dual
	[...]		Subt
	[+]		Format
	<<		<<
	Play		Play
	>>		>>
	l<<		l<<
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	>>l		>>l
	Rec		Rec
	Stop		Stop
	Tv Pause		Shift + Pause

