 










 














 
 



 








 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Time/Text		Text
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Source		AV
	Picture Mode		Format
	O)))		Dual
	[...]		Subt
	Camera		TV/R
	SUR		Options
	I<<		I<<
	>>I		>>I
	Zoom		Shift + Eject
	Picture Navi		Media
	<<		<<
	>>		>>
	Ch -		Ch -
	Ch +		Ch +
	Play		Play
	Pause		Pause
	Stop		Stop





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Display		Info
	Top Menu	+	Shift + Menu
	Menu		Menu
	Return		Back

