

 

 



 

 

 



 

 

 

 

 

 

 









Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	DVD		Shift + 2
	Video		Shift + 4
	Power		Power
	1		1
	2		2
	3		3
	Prog / Tracking +		CH+ / Page+
	4		4
	5		5
	6		6
	Prog / Tracking -		CH- / Page-
	7		7
	8		8
	9		9
	Input		AV / Input / RDS
	Angle		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	0		0
	Set		Setup / OPT /
	TV / Video		TV/Radio /
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	System Menu		Shift + D.Menu / Top Menu
	Title List		Sound / Title
	Timer		Sleep / Timer
	Display		Display / Media
	Up		Up
	Original / Playlists		Smart / List
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return



 



 





Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Options		Shift + Setup / OPT / Tools
	I<<		I<< / Preset-
	←		Shift + Left
	→		Shift + Right
	>>I		>>I / Preset+
	<< / <I		<< / Tune-
	Play		Play / Slow
	I> / >>		>> / Tune+
	Clear		Exit / Cancel / Clear
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	→/Synchro Rec		Fav / Marker / PC
	Rec Mode		Shift + Rec / Rec Mode
	TV Vol +		Vol+
	TV Prog +		Shift + CH+ /

Page+

Originalfernbedienung Ersatzfernbedienung

	TV Power		Shift + Power
	TV Vol -		Vol-
	TV Prog -		Shift + CH- /
	TV Input		Shift + AV / Input / RDS



 

 



 

 

 



 

 

 

 
 
 

 

 









Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	DVD		Shift + 2
	Video		Shift + 4
	Power		Power
	1		1
	2		2
	3		3
	Prog+		CH+ / Page+
	4		4
	5		5
	6		6
	Prog-		CH- / Page-
	7		7
	8		8
	9		9
	Input Select		AV / Input / RDS
	Angle		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	0		0
	Set		Text / Goto
	Tv/Video		TV/Radio /
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	O))		Audio / Lang I/II
	[...]		Subtitle / EQ
	System Menu		Smart / List
	Title List		Sound / Title
	Timer		Sleep / Timer
	Display		Display / Media
	Up		Up
	Original / Playlist		Shift + Smart / List
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return



 

 



 

 

 



 

 

 

 
 
 

 

 









Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	DVD		Shift + 2
	Video		Shift + 4
	Power		Power
	1		1
	2		2
	3		3
	Prog+		CH+ / Page+
	4		4
	5		5
	6		6
	Prog-		CH- / Page-
	7		7
	8		8
	9		9
	Input Select		AV / Input / RDS
	Angle		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	0		0
	Set		Text / Goto
	Tv/Video		TV/Radio /
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	O))		Audio / Lang I/II
	[...]		Subtitle / EQ
	System Menu		Smart / List
	Title List		Sound / Title
	Timer		Sleep / Timer
	Display		Display / Media
	Up		Up
	Original / Playlist		Shift + Smart / List
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return



