 

 



 


 

 

 



 

 




 




 







Originalfernbedienung Ersatzfernbedienung


 
 

 


 






	Sleep		Sleep / Timer
	Standby AV		Shift + Power
	System Standby		Power
	Video1		Shift + 4
	Video 2		Shift + 1
	DVD		Shift + 2
	MD/Tape		Shift + 5
	CD		Shift + 3
	Tuner		Shift + 6
	Top Menu		Shift + D.Menu / Top Menu
	1 Tuner		1
	Up		Up
	2 Tuner		2
	DVD Menu		D.Menu / Top
	3 Tuner		3
	Left		Left
	4 Tuner		4

Originalfernbedienung Ersatzfernbedienung

	Enter		OK
	5 Tuner		5
	Right		Right
	6 Tuner		6
	7 Tuner		7
	Down		Down
	8 Tuner		8
	Recall		Fav / Marker / PC
	9 Tuner		9
	>10 Tuner/Shift/-/-		Guide / EPG / -/-
	0 Tuner		0
	Enter/D.Tuning/Return Tuner		Back / Return
	I<</CH/Presets		I<< / Presets
	I<</CH Presets-Tuner		Shift + I<< / Presets
	>>/CH/Presets+		>>I / Presets+
	>>/CH Presets+ Tuner		Shift + >>I / Presets+
	Tv/Video/ANT		AV / Input / RDS




Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	>>		>> / Tune+
	D.Skip/TV/VTR		TV/Radio /
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	2CH		Sound / Title
	A.F.D.		Eject / Surround
	Movie/Music		Audio / Lang I/II
	Test Tone		Subtitle / EQ
	Main Menu		Menu / Home
	Multi CH		Picture / Format
	< Menu		Shift + Left
	Menu >		Shift + Right
	Muting		Mute / Dimmer
	-		CH- / Page-
	+		CH+ / Page+















 

 

 



 

 

 

 




Originalfernbedienung Ersatzfernbedienung

	Master Vol+		Vol+
	Tv Vol+		Shift + Vol+
	Tv CH+		Shift + CH+ /
	Master Vol-		Vol-
	Tv Vol-		Shift + Vol-
	Tv CH-		Shift + CH- /





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Video 1		Shift + 4
	Video 2		Shift + 1
	DVD		Shift + 2
	MD/Tape		Shift + 5
	CD		Shift + 3
	Tuner		Shift + 6
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	>10/Shift/-/-		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	0		0
	Enter/D.Tuning/Return		Back / Return
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	D.Skip/TV/VTR		TV/Radio /
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Muting		Mute / Dimmer
	Master Vol+		Vol+
	Master Vol-		Vol-

 

 





 
 

 




 
 







Originalfernbedienung Ersatzfernbedienung

	Standby CD		Power
	Standby Video		Shift + Power
	Video 1		Smart / List
	Video 2		Display / Media
	DVD		Blue / Prime Video / Random
	MD/Tape		Green / APP / Repeat
	CD		Yellow / YouTube / Repeat
	Tuner		Red / Netflix / Search
	1 CD		1
	1 Video 1		Shift + 1
	2 CD		2
	2 Video 1		Shift + 2
	3 CD		3
	3 Video 1		Shift + 3
	4 CD		4
	4 Video 1		Shift + 4
	5 CD		5

Originalfernbedienung Ersatzfernbedienung

	5 Video 1		Shift + 5
	6 CD		6
	6 Video 1		Shift + 6
	7 CD		7
	7 Video 1		Shift + 7
	8 CD		8
	8 Video 1		Shift + 8
	9 CD		9
	9 Video 1		Shift + 9
	>10/Shift/-/- CD		Guide / EPG / -/-
	>10/Shift/-/- Video 1		Shift + Guide / EPG / -/-
	0 CD		0
	0 Video 1		Shift + 0
	Enter/D.Tuning/Return CD		Back / Return
	Enter/D.Tuning/Return Video 1		Shift + Back / Return
	I<< CD		I<< / Preset-
	I<< Video 1		Shift + I<< / Preset-





Originalfernbedienung Ersatzfernbedienung

	>>I CD		>>I / Preset+
	>>I Video 1	 + 	Shift + >>I / Preset+
	<<< CD		<<< / Tune-
	<<< Video 1	 + 	Shift + <<< /
	>>> CD		>>> / Tune+
	>>> Video 1	 + 	Shift + >>> /
	D.Skip/TV/VTR CD		TV/Radio /
	D.Skip/TV/VTR Video 1	 + 	Shift + TV/Radio / Program
	Play CD		Play / Slow
	Play Video 1	 + 	Shift + Play /
	Pause CD		Pause / Step / Freeze
	Pause Video 1	 + 	Shift + Pause / Step /
	Stop CD		Stop / Hold
	Stop Video 1	 + 	Shift + Stop /
	Muting		Mute / Dimmer
	Master Vol+		Vol+
	Master Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

 


 
 

 
 

 


 

 







Originalfernbedienung Ersatzfernbedienung

 

 







 

 







 





	Standby		Power
	Standby Video		Shift + Power
	Video 1		Smart / List
	Video 2		Display / Media
	DVD		Blue / Prime Video / Random
	MD/Tape		Green / APP / Repeat
	CD		Yellow / YouTube / Repeat
	Tuner		Red / Netflix / Search
	1 MD/Tape		1
	1 Video 2		Shift + 1
	2 MD/Tape		2
	2 Video 2		Shift + 2
	3 MD/Tape		3
	3 Video 2		Shift + 3
	4 MD/Tape		4
	4 Video 2		Shift + 4
	5 MD/Tape		5

Originalfernbedienung Ersatzfernbedienung

	5 Video 2		Shift + 5
	6 MD/Tape		6
	6 Video 2		Shift + 6
	7 MD/Tape		7
	7 Video 2		Shift + 7
	8 MD/Tape		8
	8 Video 2		Shift + 8
	9 MD/Tape		9
	9 Video 2		Shift + 9
	>10/Shift/-/- MD/Tape		Guide / EPG / -/-
	>10/Shift/-/- Video 2		Shift + Guide / EPG / -/-
	0 MD/Tape		0
	0 Video 2		Shift + 0
	Enter/D.Tuning/Return MD/Tape		Back / Return
	Enter/D.Tuning/Return Video 2		Shift + Back / Return
	I<< MD/Tape		I<< / Preset-
	I<< Video 2		Shift + I<< / Preset-




Originalfernbedienung Ersatzfernbedienung

	>>I MD/Tape		>>I / Preset+
	>>I Video 2	 + 	Shift + >>I / Preset+
	<< MD/Tape		<< / Tune-
	<< Video 2	 + 	Shift + << /
	>> MD/Tape		>> / Tune+
	>> Video 2	 + 	Shift + >> /
	D.Skip/TV/VTR MD/Tape		AV / Input / RDS
	D.Skip/TV/VTR Video 2	 + 	Shift + AV / Input / RDS
	Play MD/Tape		Play / Slow
	Play Video 2	 + 	Shift + Play /
	Pause MD/Tape		Pause / Step / Freeze
	Pause Video 2	 + 	Shift + Pause / Step /
	Stop MD/Tape		Stop / Hold
	Stop Video 2	 + 	Shift + Stop /
	Muting		Mute / Dimmer
	Master Vol+		Vol+
	Master Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

