


















 

 









Originalfernbedienung Ersatzfernbedienung

| | | |
|-----------------------|---|-----------------------|
| Power |  | Power |
| Muting |  | Mute / Dimmer |
| Mode- |  | CH- / Page- |
| Mode+ |  | CH+ / Page+ |
| Vol Rs-/Effect |  | Play / Slow |
| Tape 2 Pre./eq |  | Pause / Step / Freeze |
| Sleep |  | Sleep / Timer |
| Enter |  | OK |
| Left |  | Left |
| MULTI CH / 2CH DIRECT |  | Audio / Lang I/II |
| Source |  | AV / Input / RDS |
| A.F.D. |  | Sound / Title |
| Volume+ |  | Vol+ |
| Main Menu |  | Menu / Home |
| Right |  | Right |
| Volume- |  | Vol- |
| EQ |  | Subtitle / EQ |

Originalfernbedienung Ersatzfernbedienung














| | | |
|-----------------|---|-----------------------|
| Tape 1 Hall/Ats |  | Stop / Hold |
| Display |  | Display / Media |
| TV / SAT |  | Shift + 1 |
| Repeat |  | Green / APP / Repeat |
| TAPE |  | Shift + 5 |
| TV Prog+ |  | Shift + CH+ / |
| Up / EQ+ |  | Up |
| Program |  | TV/Radio / |
| Dimmer |  | Shift + Mute / Dimmer |
| Down / EQ- |  | Down |
| Test Tone |  | Text / Goto |
| Tuner |  | Shift + 6 |
| TV Prog- |  | Shift + CH- / |
| Pr 1 |  | 1 |
| Pr 2 |  | 2 |
| Pr 3 |  | 3 |
| Pr 4 |  | 4 |







 

  

| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---|-----------------------|---|
| Pr 6 |  6 | 2CH / Off |  +  Shift + Audio / Lang I/II |
| Pr 5 |  5 | | |
| Pr 7 |  7 | | |
| Pr 8 |  8 | | |
| Pr 9 |  9 | | |
| D.Tuning |  Smart / List | | |
| D.Skip/CH/Preset - |  I<< / Preset- | | |
| D.Skip/CH/Preset |  >>I / Preset+ | | |
| MD/TAPE |  +  Shift + 7 | | |
| Power TV |  +  Shift + Power | | |
| Phono |  +  Shift + 0 | | |
| DVD/LD |  +  Shift + 2 | | |
| CD/SACD |  +  Shift + 3 | | |
| Pr 0/10 |  0 | | |
| VIDEO 1 |  +  Shift + 4 | | |
| VIDEO 2 |  +  Shift + 8 | | |
| VIDEO 3 |  +  Shift + 9 | | |



Originalfernbedienung Ersatzfernbedienung

| | | |
|----------------|---|-----------------------|
| Mute |  | Mute / Dimmer |
| Power ON/Off |  | Power |
| Every Pop |  | Picture / Format |
| Sleep |  | Sleep / Timer |
| Tape 1 Preset |  | Down |
| Vol Rs-/Effect |  | CH- / Page- |
| Repeat |  | Green / APP / Repeat |
| Tape 2 Pre./eq |  | Subtitle / EQ |
| Vol Rs+/S.Mode |  | CH+ / Page+ |
| Display |  | Display / Media |
| Stop |  | Stop / Hold |
| Woofer/Speed |  | Menu / Home |
| Tape 1 Stop |  | OK |
| Volume+ |  | Vol+ |
| Volume- |  | Vol- |
| CD/Theater |  | Audio / Lang I/II |
| Dimmer |  +  | Shift + Mute / Dimmer |

Originalfernbedienung Ersatzfernbedienung

| | | |
|-----------------|---|-----------------------------|
| ON/Off |  +  | Shift + Power |
| Program |  | TV/Radio / |
| CD Random |  | Blue / Prime Video / Random |
| Funct./Direct |  | D.Menu / Top |
| Pr 1 |  | 1 |
| Pr 2 |  | 2 |
| Pr 3 |  | 3 |
| CD Play |  | Play / Slow |
| Tape 1 Hall/Ats |  | Up |
| Pr 4 |  | 4 |
| Pr 5 |  | 5 |
| Next/Prog+ |  | >>I / Preset+ |
| Pr 6 |  | 6 |
| Pr 7 |  | 7 |
| CD Rewind |  | << / Tune- |
| Pr 8 |  | 8 |
| Pr 9 |  | 9 |



| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|-----------------------|-----------------------|---------------------|
| Prev./Prog- | I<< / Preset- | Tape 1 F.FWD | Right |
| CD F.FWD | >> / Tune+ | | |
| Pr 0/10 | 0 | | |
| CD Pause | Pause / Step / Freeze | | |
| Phono/Scan | Guide / EPG / -/-- | | |
| Mode | Smart / List | | |
| 6 Ch/Geq | + Shift + 6 | | |
| Ubs/Check | + Shift + 8 | | |
| Tuner/Bypass | Fav / Marker / PC | | |
| Band | + Shift + 9 | | |
| Aux/Video | + Shift + 7 | | |
| Disc 1 Eject | + Shift + 1 | | |
| Disc 2 | + Shift + 2 | | |
| Disc 3 Eject | + Shift + 3 | | |
| Disc 5 | + Shift + 5 | | |
| Fm Mode/Disc | Sound / Title | | |
| Tape 1 Rew | Left | | |

