





 
 

 
 
 


 




 






 













 
 
 

 
 


 




 
 

 
 
 
 
 

 

 



 
 
 
 
 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Theatre		Smart
	One-Touch Play	 + 	Shift + Play
	Sleep		Sleep
	S-Air Mode		Red
	TV Input		AV
	Picture Navi		Media
	Dimmer	 + 	Shift + Mute
	Display		Info
	Function+		Ch +
	Function-		Ch -
	Audio		Dual
	Subtitle /		Subt
	Angle / Memory Select		Format
	Sound Mode	 + 	Shift + Dual
	Dynamic Bass		Green
	Night		Yellow

Originalfernbedienung Ersatzfernbedienung

	System Menu		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Folder-	 + 	Shift + Ch -
	Folder+	 + 	Shift + Ch +
	DVD Menu		D. Menu
	DVD Top Menu	 + 	Shift + Menu
	Muting		Mute



