


 

 


 



 
 



 
 



 
 

 
 

 

 


 
 
 
 
 
 
 
 
 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		Source
	APA		Mode
	Eco Mode		Aspect Eco / Aspect
	Menu		Menu
	Reset		Shift + Power
	Up		Up
	Left		Left
	Enter		Enter
	Right		Right
	Down		Down
	Return		Auto
	Aspect		Shift + Aspect Eco / Aspect
	Keystone		Shift + Down
	Keystone		Shift + Up
	Pattern		Comp / Video
	D Zoom+		+ / Play

Originalfernbedienung Ersatzfernbedienung

	D Zoom-		- / Stop
	Vol+		Vol + / Page +
	Vol-		Vol - / Page -
	Freeze		Freeze / Timer
	Blank		Blank / Mute
	Muting		Shift + Blank / Mute

